
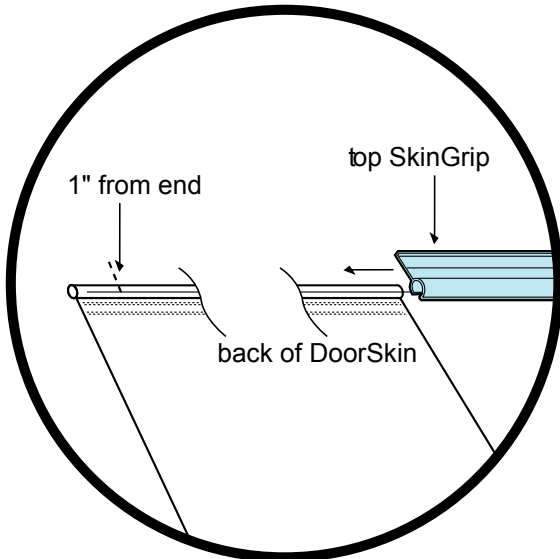



TruckSkin 877-866-SKIN

www.truckskin.com

1 Lay the DoorSkin face down on the ground. Cut and install fiberglass battens, if they haven't been cut already. Peel and stick one side of the velcro to the center of the batten. Peel the other side of the velcro, position the batten into the pockets in the center of the Skin. Make sure the velcro is firmly applied to both the batten and DoorSkin. Install the middle and bottom battens so they fit into the pockets snugly. The skin should lay flat when they are installed, not bowed.

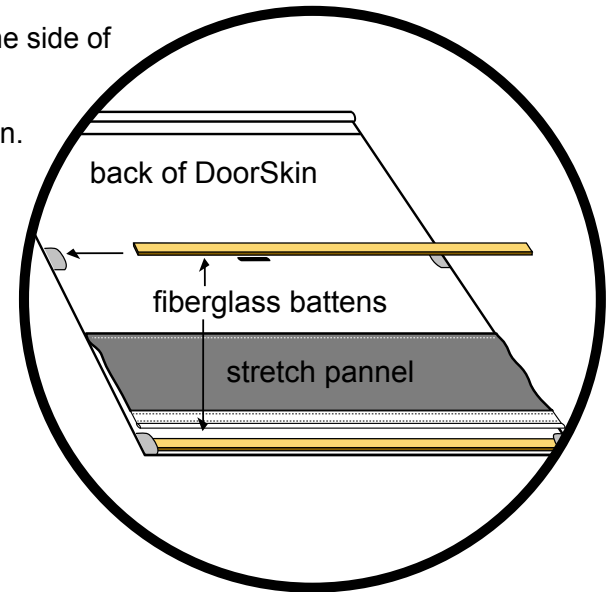


2 Slide the top hardware piece onto the DoorSkin while it is still laying on the ground. Make sure it is 1" short on each end, with the piece centered.

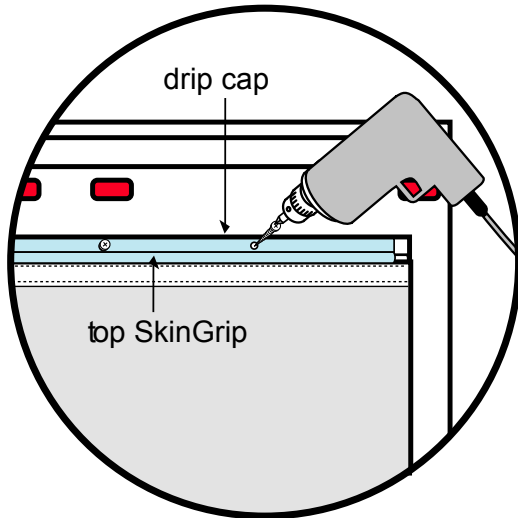

3 Using a ladder, install the top hardware piece with the DoorSkin hanging from it. Install it right underneath the drip cap (aluminum cap). Mount the top DoorSkin hardware with 4 supplied screws. If DoorSkin is measured correctly, the skin should hang down & stop just above bottom panel with door handle on it.

4 Flip the skin up and slip it under the door cables.

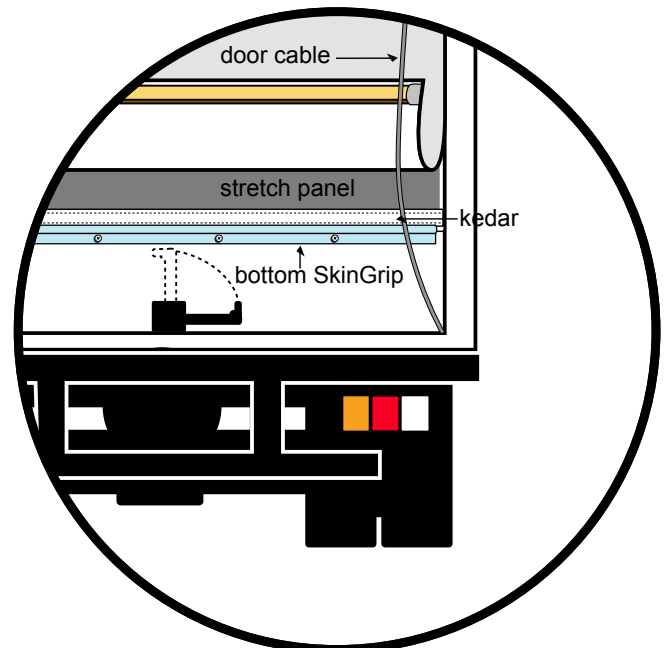

5 Hanging behind the DoorSkin is a stretch panel with a kedar sewn onto it. Slide the bottom hardware onto this. Pull the 1" stretch downward. 1" of stretch should match the hardware at a point on the truck as shown. Be sure to allow for clearance of the handle when door is in an open position. Center & level so it is straight. Use the four screws to attach it.

6 Flip the DoorSkin down, making sure it is under the cables and making sure that the door operates.